

# Bogart Engineering

## Quick reference guide to TM-2030 Battery Monitor with or without SC-2030 Solar Charger


Feb 27, 2015



TM-2030  
Battery Monitor

Battery charge information, battery charging rate control

Temperature, solar current into battery

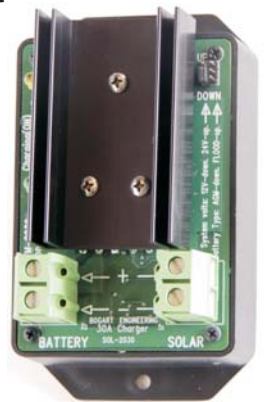

SC-2030  
Solar Charger

### TM-2030 controls and display

#### CHARGING LIGHT:

When **lighted** shows "battery 1 is charging"  
("amps" or "watts" is positive)  
**Flashing** lamp means battery is **charged**.

#### Optional: BATTERY REMINDERS:

See TM-2030 User's manual section 2.2 for details  
Lamp flashes and display occasionally shows these letters  
when: battery should be **fully charged** "Ch.F"  
or "battery should be **equalized**" "Ch.E"  
or "battery **voltage low**" "b.LO"

#### DO YOU PREFER "AMPS" OR "WATTS" to show in primary display?

See User's manual, Table 2, Program P4, to change.

#### TO ACCESS PRIMARY (MOST OFTEN USED) DISPLAYS

More description: section 1, next page

Push **"SELECT"** quickly to make display toggle through:

**VOLTS** (first battery B2, then battery B1)  
**AMPS** (or **WATTS**) charging(+) or discharging (-) battery B1  
**%FULL** (for battery 1) Battery B1 must be charged fully  
at least once before this will display.


#### TO ACCESS SECONDARY (LESS OFTEN USED) DISPLAYS ITEMS:

Push and hold **SELECT** for 3 seconds until "AH" pops into display.  
Immediately release **SELECT**. Now push **SELECT** to step through the 5  
items shown here. **Descriptions** section 2.1 next page

**TO ACCESS PROGRAM OR HISTORY DATA:** Hold **SELECT**  
down and watch for "P" (Program) or "H" (History) at left in display,  
then release **SELECT**. See sections 2.2 for details on **program**  
data. See sections 2.2.3 on **history** data.

**NOT SURE WHERE YOU ARE?** Push **SELECT** repeatedly  
until you get back home.

**IMPORTANT DISPLAY NOTE:** Flashing decimal  
point means "multiply the number seen by 1000"

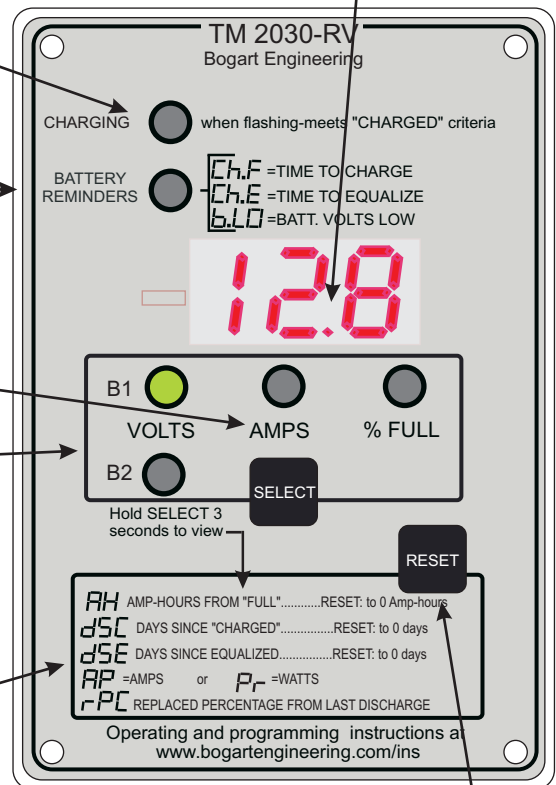

The **RESET** button will reset any of the following:  
"Batt% full" (to 100%)  
Amp Hours from full (to 0 Ahr)  
Days since charged (to 0 days)  
Days since equalized (to 0 days)

**To RESET any of these:** (1) Use **SELECT** to view it on  
display. (2) Push and hold **RESET** for 5 seconds.

## 1. Primary System Information (most important user's information)

The most important information on your battery system can be selected by pressing the select button on the TriMetric front panel to select these three primary items: (Multiply volts by 2, or 4 for 24V or 48V systems.)

1. **volts:** The voltage of your main battery (if the B1 lamp is on) or the voltage of the secondary battery (if the B2 lamp is on). Use volts to:
  - a. Check whether your batteries are charging at the voltage specified by the battery manufacturer.
  - b. Check whether the batteries are nearing a low state of charge. This would be (for 12V system) when volts are somewhat less than 12.0 volts. Between 12.0 and 14.0 volts the display is a poor indicator of state of charge in a working system. Use % full instead.
2. **amps (or watts):** This mode shows how rapidly energy is entering or leaving the battery. It is **positive** when the battery is being **charged** or **negative** when the battery is being **discharged**. This display mode can be reconfigured (using program **P4**) to show power (in Watts) instead of showing current (in Amps). Use amps or watts to:
  - a. Verify that the charger is charging the batteries at correct rate.
  - b. Know when to turn a charging generator off. As batteries become more charged, amps to the batteries will decline. Running a generator with a low charge current wastes generator energy.
  - c. Learn the power usage of your various appliances by noting the amps (or watts) difference when they are switched on and off. Do this when you are not charging batteries.
  - d. Check that all your appliances are really turned off before leaving home.
3. **% Full:** This display tells the state of charge (how much energy is left) in the battery on a percentage scale. Also use this display to:
  - a. Minimize generator run time when charging batteries by running it when “% FULL” is low and thus charging amps are higher. When %FULL is high, finish charging with solar at lower amps and longer charge times.
  - b. Observe progress while charging.

**2. Additional System Information (less important)** The following four displays will repeat as long as SELECT is held. Release SELECT when you arrive. **Programmable** settings and **History** are described below in summary form, and described in detail in TM-2030 Users Manual.

1. “**AH**” **Secondary display data:** See Section 2.1 below. The first five items in this category are listed in the lower box on front panel of TM-2030.
2. “**P1**” **Programmable settings** See Section 2.2 below.
3. “**H1**” **History data** See Section 2.3 below.
4. **(number)** **Primary System** data (described above in Section 1).

### 2.1 Secondary System Information (five items + three more for when using SC-2030 solar charger with TM-2030)

These are shown in lower box on front label. Push SELECT to advance to the next one.

**AH: Amp-hours from full.** This is another way to indicate percentage full. When the battery is full, this value is zero. When the battery is less than full, the value is a negative number, which shows how many amp-hours should be returned to the battery to fully charge it. That number is reset by holding the reset key down for at least five seconds while in that display mode. For best accuracy, reset this parameter only when you are certain the battery is fully charged.

**dSC: Days since charged.** This value shows the number of days since the battery was last fully charged. It is important to not leave the battery at a low charge level for long periods of time. It is reset automatically when the “charged criteria” are met, however it can be manually reset by holding the reset key down for at least five seconds while in that display mode.

**dSE: Days since equalized.** Provides a reminder for when to perform a manual equalization. Shows how many days have elapsed since the last time the battery was equalized. This number is not automatically reset; it must be reset by holding the reset key down for at least five seconds while in that display mode.

**With SC-2030 charger** also accesses manual equalization: See SC-2030 User's Manual, Sec. 6.6.

**Pr or AP:** Power (“Pr” on display indicating **watts**) or current (“AP” on display indicating “**amps**”) depending on whether the amps primary display was set (using program P4) for **amps** or **power**, respectively. This allows both Watts and Amps information to be available in all cases; as one is available as primary information, the other is available as secondary information.

**rPC:** Percent returned from last discharge period. Because of batteries' inherent inefficiency, it is necessary to recharge batteries with more energy than was taken out. Flooded batteries require at least 10% more charge than was removed, while AGM batteries need only about 5-8% more. While the battery is being **discharged**, the value shown is usually zero. While the battery is being **charged**, the value is the amount of charge added so far as a percentage of the amount of charge last removed: anywhere from 0% to 115% or even more.

**Push RESET while showing this display to show amp hours of the previous low discharge point**—upon which rPC is based. If the base number is small because the discharge was light, a large value of rPC is likely insignificant. ”

**The following three are not shown on front label. The SC-2030 charger must be connected and communicating with the TM-2030. They only display when the sun is supplying power to the charger.**

**°C:** The battery temperature in degrees Celsius (when temperature sensor is present).

**SOL:** Solar amperes: the amount of current being delivered by the solar panels from the SC-2030.

**UPr:** Unused solar power in watts: shows if extra power is available from the sun that could be used when battery charging is tapering down in the afternoon. Run appliances such as a dishwasher or vacuum when this extra power is available, which would otherwise be wasted. Displays **“YES”** when nearly all solar power is available for extra use; if a number is displayed, it shows watts available.

**2.2 Programmable Settings.** Two sets of programmable settings are available. The basic set is always available. The advanced set is only available only when the “user level” has been set to L3 or higher using program setting **P7**.

### **2.2.1. Basic Programmable Parameters**

**P1: Charged voltage set point:** Battery signaled as “battery charged” when volts exceeds the P1 value, and charging amps is less than P2 value. Also it is the “absorb voltage” set point for the SC-2030 charger when used. **Default “14.3”**

**P2: Charged amps set point:** As indicated in P1 above, it is the current threshold below which the charging current must be reduced before signaling “battery charged”. It also signals the SC-2030 to go into “finish charge” mode. The “amps” value is the percentage in P2 times the value of amp hours in P3. **Default “2.0”%**

**P3:** Battery system capacity in Amp-Hours (10 to 9990 A-hr). **Default “220”**

**P4:** Choose either amps (“A”) or power (watts) (“Pr”) to be in the primary display group. **Default “A”**

**P5:** Days since charged alarm set point (off, 0.0 to 250 days). **Default “Off”**

**P6:** Days since equalized alarm set point (off, 0.0 to 250 days). **Default “Off”**

**P7:** User “complexity” level. L1,L2,L3,L4. L3 or L4 is required to access “advanced” program parameters. **Default L1**

**2.2.2. Advanced Programmable Parameters**-accessible only when Program **P7** is set to L3 or L4. Default values shown below are automatically installed when switching from L4 or L3 into L2 or L1.

**P8:** Maximum voltage limit: *SC-2030 solar charger only:* this limits the maximum charging voltage.

**P9:** Lo-battery audible alarm: based on % full and battery voltage. Set “low % full” alarm point with **P9 (OFF, 1-100%)**. Set “low threshold volts” at **P13** below. **Default “OFF”**.

**P10:** Efficiency factor (60-100%): This parameter affects how the “% full” is evaluated. Discharging amp-hours always evaluated at 100%. Charging amp-hours evaluate at an amps rate determined by this setting. This compensates for battery charging inefficiency. **Default 94%**

**P11:** Shunt type: “H” means 500A/50mV. “L” means 100A/100mV. **Default H**

**P12:** Auto Reset **On-OFF:** When “OFF” percent full and amp hours are not automatically reset.

**P13:** Low battery voltage alarm setting: (10.0-65.0 V) Default: 10.0 Audible alarm also controlled by **P9**

**P14:** Maximum finish-charge time in hours until float, *SC-2030 solar charger only:* (0.0-5.0 Hr.)

**P15:** High finish charge voltage, *SC-2030 solar charger only:* (10.0-65.0 V)

**P16:** Float voltage setting: *SC-2030 solar charger only:* (10.0-65.0 V)

**P17:** Shows hours before daily history data is recorded: for History Data H7, H8 and H9 (0-24)

**P18:** Adjust battery calibration voltage

**P19:** Reset TriMetric to factory settings

**P20:** Percentage overcharge compared to last discharge until float *SC-2030 solar charger only:* (1-20%)

**P21:** Finish charge current: *SC-2030 solar charger only:* enter as a percentage (0-10%) of battery capacity **P3**

**P22:** Battery charging profiles—quickly enter correct settings for SC-2030 charger

**2.2.3 History data**—Details can be found in the TM-2030 User's Instructions section 6.3 Using History Data.

**H1:** Cumulative lifetime Amp-hours drawn from the battery. Acts like an odometer for batteries.

**History data for each of the last five charge-discharge cycles:** Use SELECT button go down the table rows. For each row, push RESET to step back in time up to five earlier periods.

**H2.1 – H2.5** Hours since last charge/discharge cycle ended.

**H3.1 – H3.5** Charge/discharge cycle duration hours.

**H4.1 – H4.5** Charge efficiency of cycle: % a-hr discharged ÷ % a-hr charged.

**H5.1 – H5.5** Lowest battery charge percentage within charge/discharge cycle.

**H6.1 – H6.5** Lowest battery voltage within charge/discharge cycle.

**History data for each of the last five days:** Use SELECT and RESET similar to above data.

**H7.1 – H7.5** Highest battery voltage each day.

**H8.1 – H8.5** If the charge set point voltage (set in program P1) was reached on a particular day, this parameter shows the least charge current during that time. If set point was not reached this parameter, shows the charge current when the highest voltage was attained that day.

**H9.1 – H9.5** Highest percentage of overcharge returned to the batteries for the day.

### 3. Where to find Other Useful Information

Programming the parameters for your batteries: Bogart Engineering website, SC-2030 User's instructions, sec 2..2.3.

How to turn on or off the audible alarm: TM-2030 User's instructions, sec 2..2.3.

Using TM-2030 history data to analyze your system: TM-2030 User's instructions, sec 6.3.

Activating and using the battery reminders SC-2030 User's instructions, sec 2.2.

How to observe the "filtered volts" and "filtered amps" for determining when batteries are considered charged, as well as an explanation of how the TM-2030 computes the battery full percentage.

Charge profile graphs which show function of all eight programmable charge parameters.

Differences between complexity levels L1, L2, L3, L4.

Help fixing meter problems: See Bogart Engineering web site: Support/Troubleshooting

Bogart Engineering website: [www.bogartengineering.com](http://www.bogartengineering.com)

### 4. SC-2030 Solar Charger LED indicators – these are two lights on the SC-2030 charge controller.

**The yellow LED**, marked "overcurrent" when lighted indicates that at least 0.4 amp solar current is available from solar panels. If the current exceeds 31 amps, this LED will flash while the SC-2030 limits current to a safe value.

**The green LED**, marked "TM-2030 Connected" indicates the charging state of the battery. When the green LED is on most of the time, this indicates the TM-2030 is connected and solar current is available to charge the batteries. When the green LED is off most of the time and blinking, this means the TM-2030 is not connected, or that no solar current is available. The number of flashes indicates the state of battery charging:

**Zero** flashes: ready to bulk charge, but not enough solar input to charge batteries.

**One** flash: bulk charging.

**Two** flashes: battery at "absorb" voltage.

**Three** flashes: battery in "float" mode.

**Four** flashes: battery in "finish charge" mode with the SC-2030 limiting the current to P21 value.

**Five** flashes: battery in "finish charge" mode with the SC-2030 limiting the voltage to P15 value.

**Six** flashes: battery is between 98-100% charged after having been in "float".